Full HD
CR-2i Full HD VIDEO RECORDER

FINE Vu

CR-2i Full HD

User Manual

FINE DIGITAL

Thank you for choosing the Finevu Car black box.

Before using the product, please read this manual carefully.
Finedigital has an on-going policy of upgrading its products and it may be possible that information in this document is not up-to-date. Please visit the Finevu website (www.finevu.com) for current updates and the latest information.

Copyright and Trademark

No part of this document can be copied or reproduced in any form without written consent from Finedigital. Finevu is a trademark of Finedigital Inc. and may not be used without the express permission of Finedigital. All trade names and trademarks are the properties of their respective companies.

Note

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Copyright © 2013, All Rights Reserved.

Contents

Safety and Precautions	Warning	4
	Caution	5
	Features	6
Components and names	Components - front	7
	Components - rear	8
	Optional Accessories	9
	Names - front camera	10
	Names - rear camera	11
Installation	Finding an installation location for a front camera	12
	Finding an installation location for a rear camera	12
	Inserting a micro SDHC card	12
	Installation - front	13
	Installation - rear	14
Using the product	Recording voice	15
	Recording video	15
	Viewing recorded videos	19
	Finevu Player	21
Settings	Memory management	22
	Memory map	23
	Connecting the black box to a PC	24
	Setup program	25
Alarms and formatting SD card	Status alarms	28
	Formatting SD card	29
Management	Firmware upgrade	30
	Cleaning and storage	31
Troubleshooting		32
Specifications		34
Installing and using FineVu Player		35

Safety and Precautions

WARNING Breaching the following precautions may result in serious personal injury or even death.

Power

- Do not use a damaged or modified power cable. Doing so may cause explosion or fire, and may result in personal injury or damage to the vehicle.
- Only use this product within the rated voltage. Failing to do so may cause explosion or fire, and result in personal injury or damage to the vehicle.
- Do not connect the power cable arbitrarily. Doing so may result in fire or product failure.

Installation

- Do not use this product in a place where there is a danger of exposure to high humidity or flammable liquids or gases. Doing so may result in explosion or fire.
- Do not leave the black box in a place with a high temperature, such as in the closed vehicle or in direct sunlight. Doing so may result in fire or product failure.
- Ensure that you install the product in a position where it won't obstruct your view. Doing so could cause a car accident.
- Plug the USB and video cables in properly. Failure to do so may result in fire or product failure.

Use

- Do not allow the product to come into contact with flammable and explosive liquids or gases. Doing so may result in explosion or fire.
- Do not allow metal or flammable substances to get into the memory card slot or cord outlet of your black box. This may result in electric shock or fire.
- Do not operate the product with wet hands. This may result in electric shock.
- Do not leave the product or its accessories within reach of children, since they may swallow small components. Doing so may result in serious personal injury or death.
- Do not cover the black box with a cloth or a blanket while in use. Continuous heating may cause fire or product failure.
- Do not operate the black box while driving. It could cause a car accident.

CAUTION

Breaching the following precautions may result in personal injury or property damage.

Installation

- Do not connect the uninterrupted power supply arbitrarily. It may result in vehicular or product failure. Make sure to consult an expert for installation.

Use

- Do not apply excessive force to the black box and the lens. Doing so may result in product failure.
- Do not use an awl or a sharp object when using the black box. Doing so may result in product failure.
- Do not spray water or wax directly onto this product. Doing so may result in electric shock or product failure.
- When you use the black box for an extended period of time, the internal heat it generates may cause your skin to burn at the contact area if touched.
- Do not disassemble or modify this product arbitrarily. Doing so may cause breakage of the product or data loss. Consult the A/S center for inspection and repair of the product.

Management

- Do not leave the product or its accessories within reach of a pet. Foreign objects could get into the inside of the product, and cause an explosion or product failure.
- Disconnect the power cable if you are not using the product for an extended period of time. Failure to do so may result in fire or product failure.
- Do not move the product while the cigar jack cord or cables are plugged in. This may result in fire or electric shock.

Note

- The specifications and user manual of this product are subject to change without notice to improve its performance.

Features

Clear video quality

- 16:9 widescreen and HD video recording
- CMOS sensor with 1920x1080 effective pixels
- High resolution, 107° horizontal wide angle camera lens
- Adjust the brightness of the video by 5 levels at night

Various recording modes

- Normal recording while driving
- Shock recording while driving
- Shock recording while parking
- Motion detection recording while parking

Voice recording and audio output

- Vivid audio recording with a high sensitivity microphone
- Clear sound output with a speaker

Super capacitor fitted

- When power is disconnected unexpectedly due to an accident or for any other reason, the super capacitor supplies the power to allow the video being recorded to be saved safely.

Easy installation

- Always recording in the correct direction by automatically changing the image orientation no matter where it is installed (Front camera only)
- Easy removal of the black box from the mount
- Quick booting

Quick and easy connection to the PC

- Direct connection with the black box via the USB port
- Auto recognition of USB storage devices
- Setup program provided (for Windows only)
- Play video with a normal video player

Expand memory

- Easy expansion of the memory using an external memory card (16 GB/ 32 GB micro SDHC)

Memory management

- You can allocate memory space for each recording mode.

Components and names

Components - front

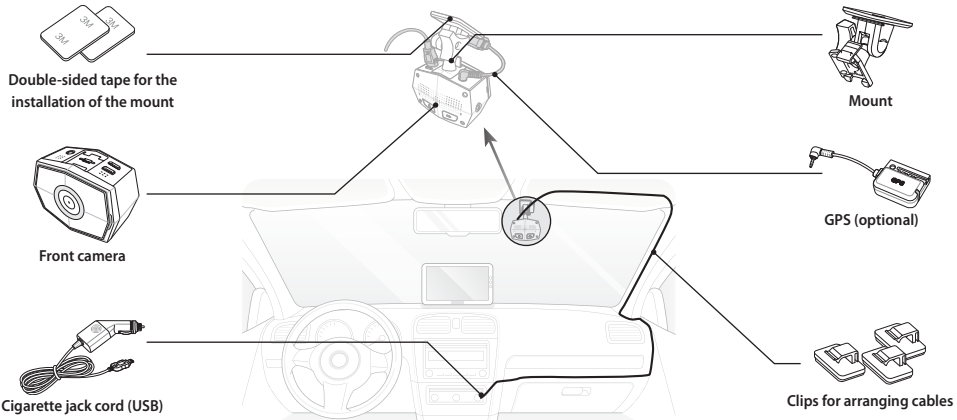

※ The components of this product are subject to change without notice in order to improve its performance.

Components - rear

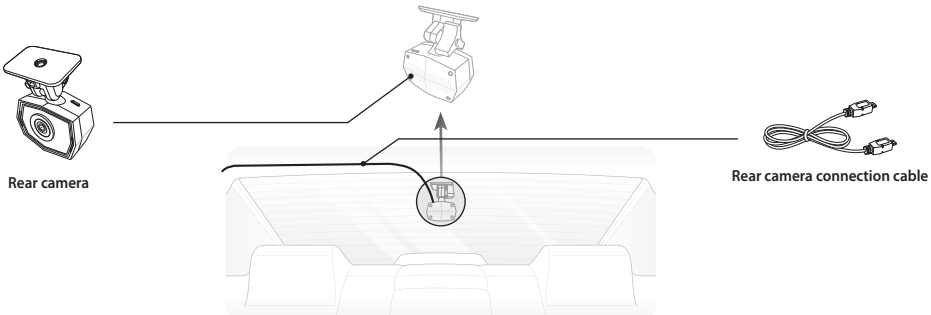

Components - PC connection

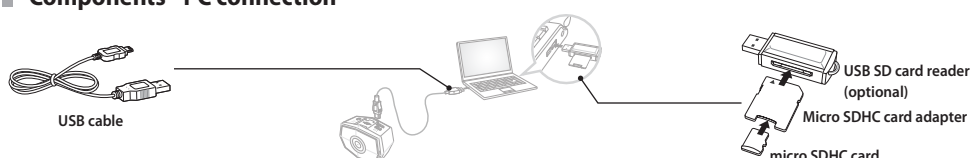

※ The components of this product are subject to change without notice in order to improve its performance.

Optional Accessories

USB SD card reader



Power adapter



External USB battery pack



GPS

Note

All accessories are available from the store where you purchased the product.

Names - front camera

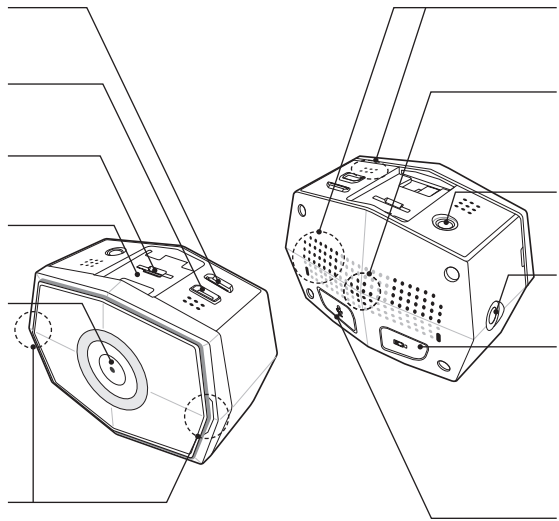

Rear connection port
Connect to a rear camera. (Video and power in/out)

USB port
Use to supply power (DC 5V) or connect to a PC.

Memory card slot
Insert a micro SDHC card.

Mount connection area
Slot the mounting bracket into the mount connection area.

Front camera lens
Record video from the front.

Security LED
Check operation of the blackbox.

Ventilation hole
Dissipates heat generated by the product.

Speaker
Alerts you to the operating status of the product with alarms and voice.

GPS connection port
Connect a GPS receiver to this port.

Video out port
View video in real time.

: Record button
Press : Make an emergency recording.
Press and hold : Switch real-time video out between front and rear camera (rear camera should be connected)

: MIC button
Turn on/off recording voice.

Names - rear camera

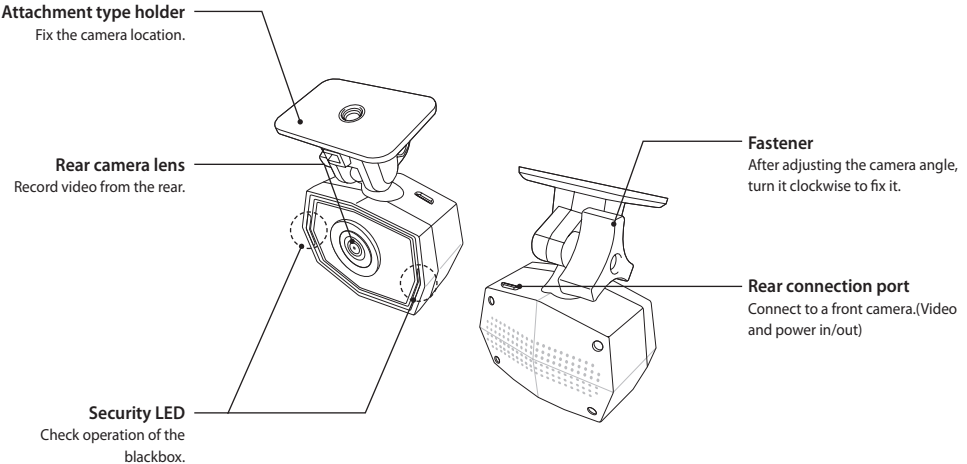
Attachment type holder
Fix the camera location.
Rear camera lens
Record video from the rear.
Security LED
Check operation of the blackbox.
Fastener
After adjusting the camera angle, turn it clockwise to fix it.
Rear connection port
Connect to a front camera.(Video and power in/out)

Note

If you use a mobile phone charger or PC micro USB cable to the rear connection port, it can cause damages. Please, use a rear only cable.

Installation

Finding an installation location for a front camera

- We recommend that the product is installed on the front windshield, either to the left or the right of the rear view mirror, and in a position that doesn't prevent you from adjusting the position of the mirror.
- You can also install it on the dashboard.

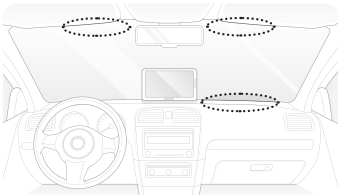

Finding an installation location for a rear camera

- You are recommended to install it in the top of the rear window of the car.

Note

Install the product in a position where it won't obstruct the driver's view.

Inserting a micro SDHC card

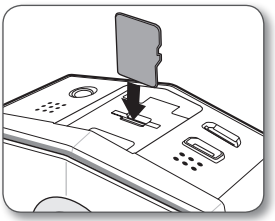

Note

Insert the Micro SD card with the golden contact area facing front.

Installation - front

1 Attach the black box to the mount

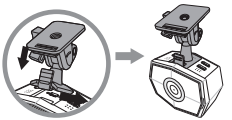

2 Install the mounting bracket in the vehicle using the double -sided tape

3 Use a cigar jack cord to connect to the power

4 Hold the power cable in position with the clips



5 Plug the cigarette jack cord into the cigarette jack



6 Install a GPS device (optional)



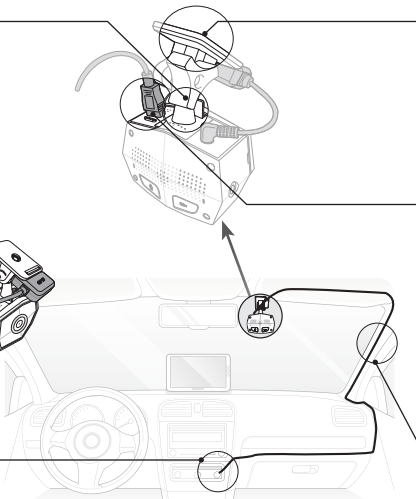

Installation - rear

1 Using the double-sided tape, attach the mounting bracket to the rear glass

2 Adjust the rear camera angle



3 Connect the front camera to the rear camera connection cable

4 Hold the rear camera connection cable in position with the clips



5 Connect a rear camera connection cable to the rear camera

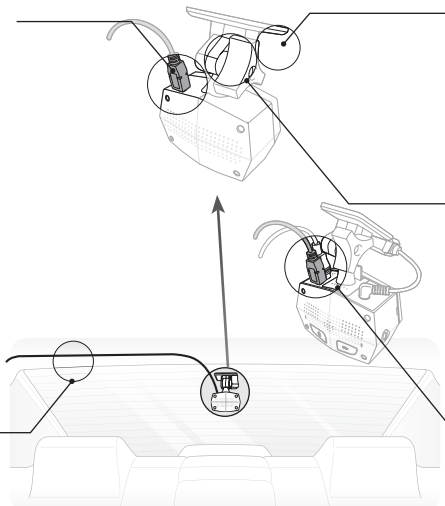

Using the product

Using a PC, you can play and check files that are recorded according to the driving or parking of your car and the default settings of the black box.

Recording voice

Note color indicates that the LED is blinking.

Mode	LED Buttons		Description
Voice Recording ON	Red	Blue	When **voice recording is OFF**, press the button. An alarm will sound and voice recording will start.
Voice Recording OFF	Off	Blue	When **voice recording is ON**, press the button. An alarm will sound and voice recording will stop.

Note

The default setting is **Voice Recording ON**.

Recording video

Basic operation

Mode	LED Buttons		Description
Booting	Red	White	Booting is completed within 15 seconds of power-up.

Recording while driving

Mode	LED Buttons		Description
Normal recording	Red	Blue	When booting is complete, the **Normal Recording** mode starts.
			The recorded video is stored in the **normal** folder on the memory card.
		Green	A rear camera is not connected.
Shock recording	Red	Red	The **Normal Recording** mode switches to the **Shock Recording** mode when a shock is detected.
			Records video 10 seconds before and 30 seconds after impact (in total 40 seconds), in the **event** folder.
Emergency recording	Red	Red	If you press the button in Normal Recording mode the mode changes to **Emergency Recording** mode.
			You can record video for max. 1 minute, and the recorded video will be saved in the **camcorder** folder on the memory card.

Note

- You can set the shock sensitivity in the **setup program**. (refer to the 25 page)
- During normal recording, even if the button blinks in green, the front video will be recorded with no problem.

Recording while parking

Mode	LED Buttons		Description
Parking	Red	Purple	If there is no movement of the vehicle for 10 minutes, the mode automatically changes to the **Parking** mode.
			When the vehicle starts, it will be automatically switched to the **Normal Recording** mode.
Shock recording	Red	Red	If an external impact to the vehicle is detected in **Parking** mode, the black box will start to record video.
			The recorded video will be saved as **_parking** in the **parking** folder on the memory card.
Motion detection recording	Red	Yellow	If the black box detects a moving object in **Parking** mode, it records video.
			The recorded video will be saved as **_motion** in the **motion** folder on the memory card.

Note

- When you use Parking mode, you need to use the uninterrupted power supply. With the exception of certain vehicle types, the uninterrupted power supply should be connected separately. Please consult an expert. (To prevent discharging of the car battery, you are recommended to install the uninterrupted power supply.)
- While parked, only Shock or motion detection recording are used for video recording.
- Do not cut the enclosed original cigar jack cord. If it is cut or damaged, the system may malfunction.
- When you enter the Parking mode, the first 40 sec of video recording will be saved in the parking folder.

Recording with external USB power (5V external battery)

Mode	LED Buttons		Description
	🎤	📹	
Booting	Red	White	Booting is completed within 15 seconds of power-up.
Normal recording	Red	Blue	If the external power is supplied to the black box through the USB port, booting will be complete and then the black box will switch to the **Normal Recording** mode.
			The recorded video is stored in the **normal** folder on the memory card.
		Green	A rear camera is not connected.
Shock recording	Red	Red	The **Normal Recording** mode switches to the **Shock Recording** mode when a shock is detected.
			Records video 10 seconds before and 30 seconds after impact (in total 40 seconds), in the **event** folder.
Emergency recording	Red	Red	If you press the button in Normal Recording mode 📹 the mode changes to **Emergency Recording** mode.
			You can record video for max. 1 minute, and the recorded video will be saved in the **camcorder** folder on the memory card.

Note

- A USB power supply is used in the same way as a car cigar jack.
- During normal recording, 📹 even if the button blinks in green, the front video will be recorded with no problem.

Viewing recorded videos

Viewing on PC (connecting the black box)

1 Connect the black box to the PC with the USB cable.

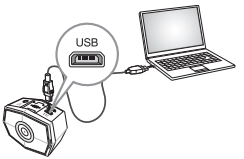

2 After booting is complete, the black box switches to USB mode and is executed as a removable disk.

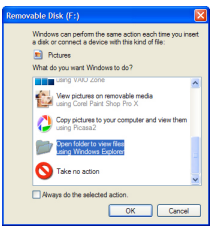
Removable Disk (F:)
Windows can perform the same action each time you insert a disk or connect a device with this kind of file:
Pictures
What do you want Windows to do?
View pictures on removable media
Copy pictures to your computer and view them
Open folder to view files
Take no action
Always do the selected action.
OK
Cancel

3 When you click '**Open folder to view files using Windows Explorer**', the folders containing videos and pictures will appear.

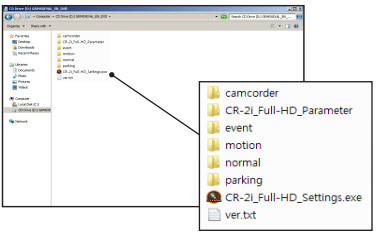

4 You can play the recorded videos and view the pictures saved in each folder.

Note

- Each folder contains:
  camcorder: Emergency recording, **event**: Shock recording, **motion**: Motion detection recording while parking, **normal**: Driving recording, **parking**: Shock detection recording while parking
- Please make sure that you back up important videos and pictures on your PC or other storage devices.

Viewing on PC (memory card)

1 Remove the micro SDHC card from the black box and insert it into the micro SD adapter. Use the memory card reader for connection with a PC.

2 When you connect the micro SDHC card to the PC, it is run as a removable disk.

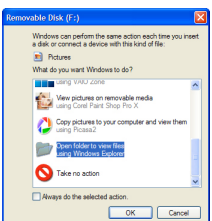
Removable Disk (F:)
Windows can perform the same action each time you insert a disk or connect a device with this kind of file:
Pictures
What do you want Windows to do?
View pictures on removable media using Corel Paint Shop Pro X
Copy pictures to your computer and view them using Picasa2
Open folder to view files using Windows Explorer
Take no action
Always do the selected action.
OK
Cancel

3 When you click '**Open folder to view files using Windows Explorer**', the folders containing videos and pictures will appear.

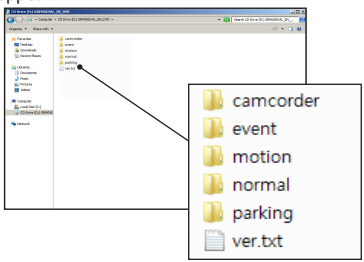

4 You can play the recorded videos and view the pictures saved in each folder.

Note

- Each folder contains:
  camcorder: Emergency recording, **event**: Shock recording, **motion**: Motion detection recording while parking, **normal**: Driving recording, **parking**: Shock detection recording while parking
- Please make sure that you back up important videos and pictures on your PC or other storage devices.

Finevu Player

You can play the recorded video in your FINEVu player on the PC as follows.

Settings

Before configuring the settings, find out about the video range of each recording mode and the number of files to be saved in the memory.

Memory management

The start and end recording times differ for each recording mode, depending on the resolution of the video.

<table>
<tr><th colspan="2">Mode</th><th colspan="2">Time saved</th><th>Folder name</th></tr>
<tr><td colspan="2">Resolution</td><td>1080p</td><td>720p</td><td></td></tr>
<tr><td colspan="2">Normal recording</td><td>3 minutes in total</td><td>3 minutes in total</td><td>normal</td></tr>
<tr><td colspan="2">Shock recording</td><td rowspan="3">1080p 10 sec before / 30 sec after, a total of 40 sec.</td><td rowspan="3">720p 10 sec before/30 sec after, a total of 40 sec</td><td>event</td></tr>
<tr><td rowspan="2">Recording while parking</td><td>Shock recording</td><td>parking</td></tr>
<tr><td>Motion detection recording</td><td>motion</td></tr>
<tr><td colspan="2">Emergency recording</td><td>1080p 10 sec before / 50 sec after, a total of 60 sec.</td><td>720p 10 sec before / 50 sec after, a total of 60 sec.</td><td>camcorder</td></tr>
</table>

Memory map

The maximum **recording time** and **number of files** for each recording mode are as follows:

Memory size	Category		Normal recording	Event recording	Emergency recording	Remarks
16GB 2 hr 53 min	Max. size		6.66GB	6.66GB	1.48GB	1080p 24fps for the front. H.264 encoding / 12Mbps / Main profile
	Max. storage time		78 minutes	78 minutes	17 minutes	
	Max. no. of files		3 min video	40 sec video	1 min video	
		1 ch. recording	26 files	117 files	17 files	
		2ch. recording	16 files for the front 16 files for the rear	72 files for the front 72 files for the rear	10 files for the front 10 files for the rear	
32GB 5 hr 46 min	Max. size		13.32 GB	13.32 GB	2.96 GB	
	Max. storage time		156 min.	156 min.	34 min.	
	Max. no. of files		3 min video	40 sec video	1 min video	
		1 ch. recording	52 files	234 files	34 files	
		2ch. recording	32 files for the front 32 files for the rear	144 files for the front 144 files for the rear	20 files for the front 20 files for the rear	

Note

When there is insufficient space for recording, the old video files are deleted and the new video files are stored.
(Normal recording: normal, Shock/Motion detection recording: camcorder, Emergency recording: event)

Connecting the black box to a PC

1 Connect the black box to the PC with the USB cable.

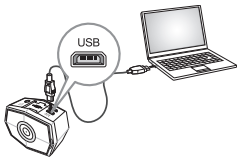

2 After booting is complete, the black box switches to USB mode and is executed as a removable disk.

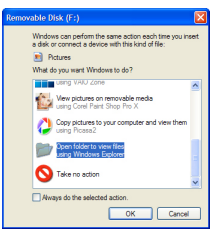
Removable Disk (F:)
Windows can perform the same action each time you insert a disk or connect a device with this kind of file:
Pictures
What do you want Windows to do?
View pictures on removable media using Corel Paint Shop Pro X
Copy pictures to your computer and view them using Picasa2
Open folder to view files using Windows Explorer
Take no action
Always do the selected action.
OK
Cancel

3 When you click **'Open folder to view files using Windows Explorer'**, a folder with the executable file will display, as shown in the figure.

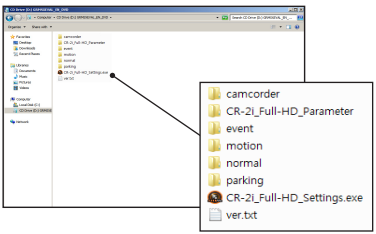

4 When you run **CR-2i Full HD_Setting.exe,** the **CR-2i_Full-HD_Settings.exe** setup is copied onto the desktop and then run.

Setup program

Basic settings

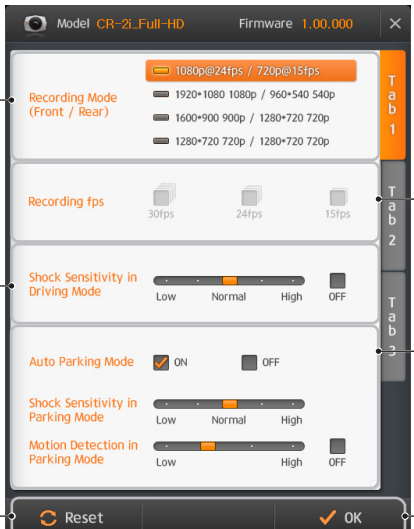

Recording mode
This is the resolution for the video recording.

Shock Sensitivity in Driving Mode
Set the shock sensitivity during driving.

Reset
Click to initialize all settings.

Recording fps
Set the recording frames per second during driving.

Auto Parking Mode
Specify whether to enter the parking mode.

Shock Sensitivity in Parking Mode
Set the shock sensitivity for parking.

Motion Detection in Parking Mode
Set the motion sensitivity for parking.

OK
Click to apply and save the changes.

Advanced setting

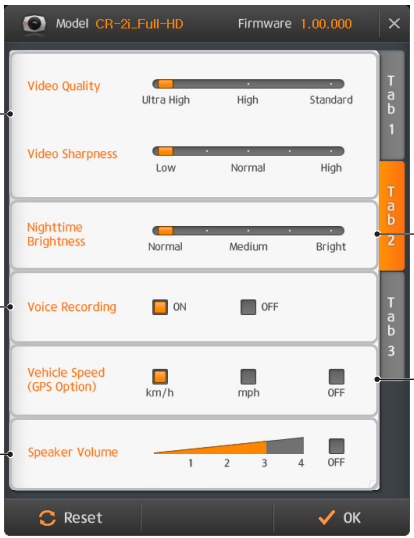

Video Quality
Set the quality of recorded videos.

Video Sharpness
Set the sharpness of recoded videos.

Voice Recording
Set whether to record voice.

Speaker Volume
Set the speaker volume.

Nighttime Brightness
Set the brightness of the video at night in low lighting conditions.

Vehicle Speed (GPS option)
Set how the vehicle speed is shown by GPS.

User setting

Video Rotation
Set the orientation of video to be recorded according to the installation location.

Video Out Format
Select NTSC or PAL as the video output mode.

System Time
Set the system time of the PC.

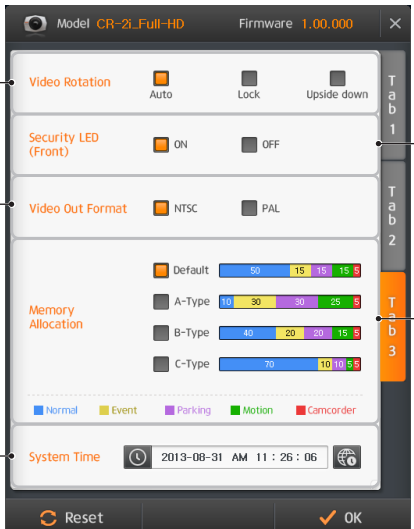

Security LED (Front)
Specify whether to use the LED for the front camera.

Memory Allocation
Set the memory allocation ratio for recording while driving, and Parking/ Motion Detection recording.

Alarms and formatting SD card

Status alarms

Status	Alarm
Booting sound & Start recording	"Ding-Dong~ Video recording starts." "Beep, beep~"(rear camera not connected)
Emergency recording	"Cha-Re-Rook" (sound of projector)
GPS receiving sounds	"GPS is connected"
Memory recognition error sound	"Beep~ Check your memory card."
Recording starts in Parking mode	"Ding-Dong~ Parking mode."
Recording in Shock mode	"Beep~"
USB mode	"Ding-Dong~ USB mode."
Finishing sound	"Dong-Ding~"
Enable MIC Mute	"Ding~"
Disable MIC Mute	"Ding-Dong~"

Status	Alarm
Reset time*	"Beep~ Check the time setting."
Format progress sound	"Beep, beep, beep"
Switch to Normal recording	"Ding-Dong~"
Firmware upgrade	"Upgrade starts."
Front/rear video switching	"Ding-Dong~"

Note

If a time error on system occurs, an alarm sound is played each time the black box is booted. In this case, connect the black box to a PC and then set the system time again using the Setup program.

Formatting SD card

1 Press the button until power is supplied and then hold it down for about 7 seconds.

2 When 7 seconds have passed the LED of the button blinks for 2 seconds.

3 After booting is complete, formatting proceeds with the "Beep~ Beep~ Beep~" alarm.
(The LED of the button is shown in yellow during formatting.)

4 When formatting is complete, recording starts after rebooting.

Note

- SD card will be formatted and deleted video will not be recovered. So, before formatting, copy important video to your PC or portable memory.
- If your SD card has something other than video recording, it will detect it as an error and start formatting automatically. So, do not use it for other purpose than video recording.
- If you format your SD card on the PC, then set the allocation unit to 32KB.

Management

Firmware upgrade

1 Download the latest firmware from the website.

2 Remove the Micro SDHC card from the black box and place it in the adapter. Use the memory card reader for connection with a PC.

3 When you connect the Micro SD card to a PC, it is executed as a removable disk. (It is recommended that you format the memory card prior to the firmware upgrade.)

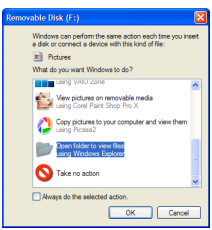
Removable Disk (F:)
Windows can perform the same action each time you insert a disk or connect a device with this kind of file:
Pictures
What do you want Windows to do?
View pictures on removable media using Corel Paint Shop Pro X
Copy pictures to your computer and view them using Picasa2
Open folder to view files using Windows Explorer
Take no action
Always do the selected action.
OK
Cancel

4 Unzip the downloaded firmware and copy it to the root directory of the memory card.

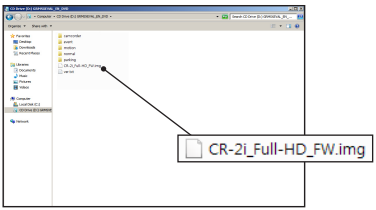

5 Insert the micro SDHC card into the black box. When you boot up the black box, the two LEDs will blink and then the upgrade will start.

Note

- The upgrade takes 3 minutes. When the upgrade is complete, the firmware file will automatically be deleted.
- Prior to upgrade, it is recommended that you back up all important files on the Micro SD card.

Cleaning and storage

Cleaning

- If there is a foreign object on the lens, wipe it down with a soft cloth.
  - To obtain high quality video, do not touch the lens with your hands or allow it to make contact with other objects.
- Clean the black box with a tissue or a dry cloth if there is a foreign object on its exterior.
- Do not attempt to disassemble the black box and take out a foreign object using a tool if it is inside the black box. Contact the A/S center.

Storage

- If you are not using the black box, remove it from your vehicle and keep it indoors.
- Make sure to disconnect the power while storing it.
- Keep the black box enclosed if possible and avoid damp places.
- Remove the memory card to prevent it from degrading while storing the black box.

Troubleshooting

The black box does not turn on.

- Check if the power (cigarette jack cord) is connected.
- Check the battery power status of the vehicle.

Buttons are not working.

- Check if the black box is in video recording status after booting.
- If the buttons are not working in the recording state, request after sales service.

The black box does not boot up.

- Check if the cigarette jack cord is the original one.
- Check if the power LED of the cigarette jack cord is on.
- Check if the micro SDHC memory card has been inserted into the black box properly.
- Check if the external memory card format is FAT32. (NTFS and exFAT are not recognized.)
- Check if the external memory card is faulty or not an original component.

Booting is complete, but there is no sound.

- On the Setup Program screen, check if the alarm volume is set to its lowest.
- If there is still no sound after adjusting the volume, request after sales service.

Recorded video does not play.

- Video may not play depending on the characteristics of the video player.
- If the problem still persists, request after sales service.

My PC does not recognize the black box.

- If the connection often disconnects or becomes unstable, connect the black box directly to a USB port on the PC without using a USB hub. Connection through a USB hub may not provide stable power to the black box.

The black box is recognized on the PC USB, but is disconnected.

- Connect the black box to the USB port on the PC mainboard if possible.
- Remove any other USB devices connected to the PC. Connect the black box only or connect it to the USB host card.
- Check if the same problem occurs on other PCs. If so, request after sales service.

The black box is connected to the USB port of a navigation device, but it is not working.

- Recording is unavailable with power through the USB port of a navigation device. It is, however, recognized as a USB movable disk.

No scenes are recorded in the video.

- Check if the black box booted properly.
- If only audio plays without a video image display, request after sales service.

I would like to change the external memory card.

- You can use any original micro SDHC card with the same specification as the card supplied. (or a card which does not exceed the recommended limit defined in the Specification section below.)
- The physical characteristics of micro SDHC cards differ from manufacturer to manufacturer. Some micro SDHC cards may not be compatible with Finedigital black box.

Specifications

Item	Spec		Remarks
Model Name	CR-2i Full HD		
Size/weight	Front: 67 x 50 x 41mm / 75g Rear: 50 x 50 x 28mm / 29g		cable/mounting bracket weights excluded.
Memory capacity	micro SDHC	16GB/32GB	Class 10 or later recommended
Recording methods	Normal recording	Supports (Front : 1920x1080@24fps Rear : 1280x720@15fps)	3 minute unit recording
	Shock recording		Records video 10 seconds before and 30 seconds after impact (40 seconds in total).
	Emergency recording		One minute unit recording
	Parking recording (Shock and motion detection recording)		Records video 10 seconds before and 30 seconds after impact (40 seconds in total). An additional device needs to be installed in vehicles that do not support uninterrupted power.
Angle of view	Front : Diagonal 130º / Horizontal 107º / Vertical 56º Rear : Diagonal 145º / Horizontal 123º / Vertical 66º		
Video	1920 x 1080 Full-HD (front) 1280 x 720 HD (rear)		
Audio	Built-in microphone		
	Built-in speaker	8 ohms	
Acceleration sensor	3-Axis Acceleration Sensor	+2 g/ -2 g	
Input power	USB 5V 3A		External battery supported
Battery	Super capacitor		If external power is cut off, it will supply safe power to save video.
Power consumption	Max 4.5W		
Operating/ Storage temperature	Operating temperature: -10°C ~ 60°C Storage temperature: -20°C ~ 70°C		
Interface	USB 1.1 / 2.0 Mini B type / micro USB, 5 pins(for the rear connection)		
Video output	TV / Navigation device output		NTSC / PAL

Installing and using FineVu Player

FineVu Player is the software that enables you to play a video recorded by the Fine Digital black box.
Download FineVu Player from http://www.finevu.com and install it.

Main screen

When you install and then run FineVu Player, the following screen is displayed.

1 The main screen where a recorded video is played

2 The sub screen where the selected part of the main screen is shown enlarged

3 The List screen showing a list of recorded videos

4 The Control bar with which you can play and control recorded videos

5 The GPS popup displayed when the recorded video contains GPS information
(* It is not displayed when there is no GPS information available.)

Playing and checking recorded videos

1 Click the Open button in the control bar.

2 Select a folder containing recorded videos.

3 Select a video file listed in the List screen and then click the Play button to play the selected video.



4 Now you can check the scenes being played. You can move around and check the scenes by time using the buttons in the Control bar.

Recommended PC specifications for FineVu Player

	Minimum	Recommended
OS	Windows XP SP3	Windows Vista, 7
HDD	30 MB	50 MB or more
CPU	Pentium4 3.0 GHz	Intel Dual Core or later / AMD AthlonX2 or later
VGA	128 MB	512 MB or more
RAM	1 GB	2 GB or more
DirectX	9.0c	9.0c

Limited Warranty

This product is guaranteed against manufacturing defects for one (1) year (six (6) months for battery and accessories) from the original date of purchase. Finedigital's sole obligation in the event of such defects during this period is to repair or replace the defective part or product with a comparable part or product at Finedigital's sole discretion. Except for such replacement, the sale, or other handling of this product is without warranty, condition or other liability even though the defect or loss is caused by negligence or other fault. Damage resulting from use, accident, or normal wear and tear is not covered by this or any warranty. Finedigital assumes no liability for any accident, injury, death, loss, or other claim related to or resulting from the use of this product. In no event shall Finedigital be liable for incidental or consequential damages relating to or resulting from the use of this product or any of its parts.

Finedigital is not liable for the costs of installing and removing the products and its accessories regardless of the warranty period.

FINE DIGITAL

www.FineVu.com